



# Tone List

PIANO						
GBN	PC	CC00	CC32	Sound Name	Voices	
A11	01	00	0	Piano 1	1	
A11 <sub>1</sub>		08	0	Piano1w	2	
A11 <sub>2</sub>		16	0	Piano1d	1	
A12	02	00	0	Piano 2	1	
A12 <sub>1</sub>		08	0	Piano2w	2	
A13	03	00	0	Piano 3	1	
A13 <sub>1</sub>		08	0	Piano 3w	2	
A14	04	00	0	HonkTonk	2	
A14 <sub>1</sub>		08	0	HonkTnkW	1	
A15	05	00	0	E.Piano1	1	
A15 <sub>1</sub>		08	0	DetunEP1	2	
A15 <sub>2</sub>		16	0	EPiano1v	2	
A15 <sub>3</sub>		24	0	60'Piano	2	
A16	06	00	0	E.Piano2	1	
A16 <sub>1</sub>		08	0	DetunEP2	2	
A16 <sub>2</sub>		16	0	EPiano2v	2	
A17	07	00	0	Harpsi	1	
A17 <sub>1</sub>		08	0	CouplHps	2	
A17 <sub>2</sub>		16	0	Harpsi.w	2	
A17 <sub>3</sub>		24	0	Harpsi.o	2	
A18	08	00	0	Clav.	1	

CHROMATIC PERCUSSION						
GBN	PC	CC00	CC32	Sound Name	Voices	
A21	09	00	0	Celesta	1	
A22	10	00	0	Glocken	1	
A23	11	00	0	MusicBox	1	
A24	12	00	0	Vib	1	
A24 <sub>1</sub>		08	0	Vib.w	2	
A25	13	00	0	Marimba	1	
A25 <sub>1</sub>		08	0	MarimbaW	2	
A26	14	00	0	Xylophon	1	
A27	15	00	0	Tub-bell	1	
A27 <sub>1</sub>		08	0	ChurcBel	1	
A27 <sub>2</sub>		09	0	Carillon	1	
A28	16	00	0	Santur	1	

ORGAN						
GBN	PC	CC00	CC32	Sound Name	Voices	
A31	17	00	0	Organ 1	1	
A31 <sub>1</sub>		08	0	DetunOr1	2	
A31 <sub>2</sub>		16	0	60'sOrg1	1	
A31 <sub>3</sub>		32	0	Organ 4	1	
A32	18	00	0	Organ 2	1	
A32 <sub>1</sub>		08	0	DetunOr2	2	
A32 <sub>2</sub>		32	0	Organ 5	1	
A33	19	00	0	Organ 3	2	
A34	20	00	0	Church1	1	
A34 <sub>1</sub>		08	0	Church2	2	
A34 <sub>2</sub>		16	0	Church3	2	
A35	21	00	0	Reed Org	1	
A36	22	00	0	AccordFr	2	
A36 <sub>1</sub>		08	0	AccordIt	2	
A37	23	00	0	Harmonic	1	
A38	24	00	0	Bandneon	2	

GUITAR						
GBN	PC	CC00	CC32	Sound Name	Voices	
A41	25	00	0	NylonGtr	1	
A41 <sub>1</sub>		08	0	Ukulele	1	
A41 <sub>2</sub>		16	0	NylonGto	2	
A41 <sub>3</sub>		32	0	NylonGt2	1	
A42	26	00	0	StStrGt	1	
A42 <sub>1</sub>		08	0	12-strGt	2	
A42 <sub>2</sub>		16	0	Mandolin	1	
A43	27	00	0	Jazz Gtr	1	
A43 <sub>1</sub>		08	0	HawaiGt	1	
A44	28	00	0	CleanGtr	1	
A44 <sub>1</sub>		08	0	ChorusGt	2	
A45	29	00	0	MutedGtr	1	
A45 <sub>1</sub>		08	0	FunkGtr	1	
A45 <sub>2</sub>		16	0	FunkGtr2	1	
A46	30	00	0	OvdrvGt1	1	
A47	31	00	0	DstortG1	1	
A47 <sub>1</sub>		08	0	FeedbGtr	2	

GBN	PC	CC00	CC32	Sound Name	Voices
A48	32	00	0	GtrHarmo	1
A48 <sub>1</sub>		08	0	GtrFeedb	1

BASS						
GBN	PC	CC00	CC32	Sound Name	Voices	
A51	33	00	0	AcouBass	1	
A52	34	00	0	FingBass	1	
A53	35	00	0	PickBass	1	
A54	36	00	0	Fretless	1	
A55	37	00	0	Slap Bs1	1	
A56	38	00	0	Slap Bs2	1	
A57	39	00	0	SynthBs1	1	
A57 <sub>1</sub>		01	0	SyBas101	1	
A57 <sub>2</sub>		08	0	SyBass 3	1	
A58	40	00	0	SynthBs2	2	
A58 <sub>1</sub>		08	0	SyBass 4	2	
A58 <sub>2</sub>		16	0	RubrBass	2	

ORCHESTRA						
GBN	PC	CC00	CC32	Sound Name	Voices	
A61	41	00	0	Violin	1	
A61 <sub>1</sub>		08	0	SViolin	1	
A62	42	00	0	Viola	1	
A63	43	00	0	Cello	1	
A64	44	00	0	Contrabs	1	
A65	45	00	0	TremoStr	1	
A66	46	00	0	Pizzicat	1	
A67	47	00	0	Harp	1	
A68	48	00	0	Timpani	1	

ENSEMBLE						
GBN	PC	CC00	CC32	Sound Name	Voices	
A71	49	00	0	Strings	1	
A71 <sub>1</sub>		08	0	Orchestr	2	
A72	50	00	0	SlowStr	1	
A73	51	00	0	Syn Str1	1	
A73 <sub>1</sub>		08	0	SyStrng3	2	

GBN	PC	CC00	CC32	Sound Name	Voices
A74	52	00	0	Syn.Str2	2
A75	53	00	0	ChoirAah	1
A751		32	0	ChoirAh2	1
A76	54	00	0	VoiceOoh	1
A77	55	00	0	SynVox	1
A78	56	00	0	Orch Hit	2

**BRASS**

GBN	PC	CC00	CC32	Sound Name	Voices
A81	57	00	0	Trumpet	1
A82	58	00	0	Trombone	1
A821		01	0	Trombne2	2
A83	59	00	0	Tuba	1
A84	60	00	0	MutedTp	1
A85	61	00	0	Fr Horn	2
A851		01	0	FrHorn2	2
A86	62	00	0	Brass 1	1
A861		08	0	Brass 2	2
A87	63	00	0	SyBrass1	2
A871		08	0	SyBrass3	2
A872		16	0	AnBrass1	2
A88	64	00	0	SyBrass2	2
A881		08	0	SyBrass4	1
A882		16	0	AnBrass2	2

**REED**

GBN	PC	CC00	CC32	Sound Name	Voices
B11	65	00	0	SoprSax	1
B12	66	00	0	Alto Sax	1
B13	67	00	0	TenorSax	1
B14	68	00	0	BaritSax	1
B15	69	00	0	Oboe	1
B16	70	00	0	EnglHorn	1
B17	71	00	0	Bassoon	1
B18	72	00	0	Clarinet	1

**PIPE**

GBN	PC	CC00	CC32	Sound Name	Voices
B21	73	00	0	Piccolo	1
B22	74	00	0	Flute	1
B23	75	00	0	Recorder	1
B24	76	00	0	PanFlute	1
B25	77	00	0	BotBlow	2
B26	78	00	0	Shakuhac	2
B27	79	00	0	Whistle	1
B28	80	00	0	Ocarina	1

**SYNTH LEAD**

GBN	PC	CC00	CC32	Sound Name	Voices
B31	81	00	0	Square W	2
B311		01	0	Square	1
B312		08	0	SineWave	1
B32	82	0	0	Saw Wave	2
B321		01	0	Saw	1
B322		08	0	DoctSolo	2
B33	83	00	0	SynCall	2
B34	84	00	0	ChifferL	2
B35	85	00	0	Charang	2
B36	86	00	0	Solo Vox	2
B37	87	00	0	5th SawW	2
B38	88	00	0	Bas&Lead	2

**SYNTH PAD**

GBN	PC	CC00	CC32	Sound Name	Voices
B41	89	00	0	Fantasia	2
B42	90	00	0	Warm Pad	1
B43	91	00	0	Polysynt	2
B44	92	00	0	SpVoice	1
B45	93	00	0	BowGlass	2
B46	94	00	0	MetalPad	2
B47	95	00	0	Halo Pad	2
B48	96	00	0	SweepPad	1

**SYNTH SFX**

GBN	PC	CC00	CC32	Sound Name	Voices
B51	97	00	0	Ice Rain	2
B52	98	00	0	Soundtrk	2
B53	99	00	0	Crystal	2
B531		01	0	SyMallet	1
B54	100	00	0	Atmosph	2
B55	101	00	0	Brightns	2
B56	102	00	0	Goblin	2
B57	103	00	0	EchoDrop	1
B571		01	0	EchoBell	2
B572		02	0	Echo Pan	2
B58	104	00	0	StarThem	2

**ETHNIC MISC**

GBN	PC	CC00	CC32	Sound Name	Voices
B61	105	00	0	Sitar	1
B611		01	0	Sitar 2	2
B62	106	00	0	Banjo	1
B63	107	00	0	Shamisen	1
B64	108	00	0	Koto	1
B641		08	0	TKoto	2
B65	109	00	0	Kalimba	1
B66	110	00	0	Bag Pipe	1
B67	111	00	0	Fiddle	1
B68	112	00	0	Shanai	1

**PERCUSSIVE**

GBN	PC	CC00	CC32	Sound Name	Voices
B71	113	00	0	TinkBell	1
B72	114	00	0	Agogo	1
B73	115	00	0	SteelDrm	1
B74	116	00	0	Woodblk	1
B741		08	0	Castanet	1
B75	117	00	0	Taiko	1
B751		08	0	ConcrtBD	1
B76	118	00	0	MeloTom1	1
B761		08	0	MeloTom2	1
B77	119	00	0	SynthDrm	1
B771		08	0	808 Tom	1
B772		09	0	ElecPerc	1



GBN	PC	CC00	CC32	Sound Name	Voices
<b>B78</b>	<b>120</b>	<b>00</b>	<b>0</b>	<b>RevrnCym</b>	<b>1</b>

### SFX

GBN	PC	CC00	CC32	Sound Name	Voices
<b>B81</b>	<b>121</b>	<b>00</b>	<b>0</b>	<b>GFrtnois</b>	<b>1</b>
B811		01	0	GtCNoise	1
B812		02	0	StrSlap	1
<b>B82</b>	<b>122</b>	<b>00</b>	<b>0</b>	<b>Brtnoise</b>	<b>1</b>
B821		01	0	FLKClick	1
B83	123	00	0	Seashore	1
B831		01	0	Rain	1
<b>B832</b>		<b>02</b>	<b>0</b>	<b>Thunder</b>	<b>1</b>
B833		03	0	Wind	1
B834		04	0	Stream	2
B835		05	0	Bubble	2
<b>B84</b>	<b>124</b>	<b>00</b>	<b>0</b>	<b>Bird</b>	<b>2</b>
B841		01	0	Dog	1
B842		02	0	HorseGlp	1
B843		03	0	Bird 2	1
<b>B85</b>	<b>125</b>	<b>00</b>	<b>0</b>	<b>Telephn1</b>	<b>1</b>
B851		01	0	Telephn2	1
B852		02	0	DCreakng	1
B853		03	0	Door	1
B854		04	0	Scratch	1
B855		05	0	Windchim	2
B86	126	00	0	Helicptr	1
<b>B861</b>		<b>01</b>	<b>0</b>	<b>CarEngin</b>	<b>1</b>
B862		02	0	Car Stop	1
B863		03	0	Car Pass	1
B864		04	0	CarCrash	2
B865		05	0	Siren	1
B866		06	0	Train	1
B867		07	0	Jetplane	2
B868		08	0	Starship	2
B869		09	0	BrstNois	2

GBN	PC	CC00	CC32	Sound Name	Voices
<b>B87</b>	<b>127</b>	<b>00</b>	<b>0</b>	<b>Applause</b>	<b>2</b>
B871		01	0	Laughing	1
B872		02	0	Screamin	1
B873		03	0	Punch	1
B874		04	0	Heart	1
B875		05	0	Footstep	1
B88	128	00	0	Gun Shot	1
B881		01	0	MachGun	1
B882		02	0	Lasergun	1
<b>B883</b>		<b>03</b>	<b>0</b>	<b>Explosion</b>	<b>2</b>

Names in **bold** type: automatic “best-of” selection when you use the numeric keypad for selecting Tones. This may be a Variation rather than the intended main (“Capital”) Tone.

# Music Style list

No.	Name	BPM	TimeS	CC00	CC32
<b>ROCK &amp; DANCE</b>					
11	Rock1	90	4/4	1	43
12	Rock2	120	4/4	1	44
13	Rock3	126	4/4	1	46
14	Sh Rock	120	4/4	1	45
15	Hip Hop	88	4/4	2	93
16	Techno	137	4/4	2	95
17	House	130	4/4	2	94
18	Dance	108	4/4	2	96

## POP

21	8B Pop1	60	4/4	6	60
22	8B Pop2	68	4/4	6	59
23	8B Pop3	73	4/4	6	58
24	8B Pop4	88	4/4	6	57
25	16B Pop1	77	4/4	7	63
26	16B Pop2	94	4/4	7	65
27	16B Pop3	98	4/4	7	66
28	16B Pop4	100	4/4	7	64

## 50's & 60's

31	Sl Rock1	98	6/8	5	23
32	Sl Rock2	92	4/4	5	24
33	Ballad1	75	4/4	4	20
34	Ballad2	116	4/4	4	21
35	Rock'N1	180	4/4	10	27
36	Rock'N2	185	4/4	10	28
37	Boogie	156	4/4	9	10
38	Twist	162	4/4	10	32

No.	Name	BPM	TimeS	CC00	CC32
<b>JAZZ</b>					
41	Sl Swing	56	4/4	13	19
42	MedSwing	134	4/4	13	13
43	Sw Combo	150	4/4	12	20
44	BrtSwing	190	4/4	12	21
45	FstSwing	208	4/4	12	22
46	BigBand1	96	4/4	14	14
47	BigBand2	136	4/4	14	12
48	JazzWltz	100	3/4	17	26

## LATIN

51	Bossa1	150	4/4	22	23
52	Bossa2	168	4/4	22	24
53	Samba1	103	4/4	27	13
54	Samba2	117	4/4	27	14
55	ChaCha	132	4/4	24	8
56	Mambo	95	4/4	38	8
57	Salsa	98	4/4	25	10
58	Merengue	138	4/4	59	5

## VARIETY 1

61	Blues	61	4/4	44	19
62	R&B	105	4/4	44	16
63	Shuffle	145	4/4	15	7
64	Foxtrot	185	4/4	34	8
65	Charlest	205	4/4	11	5
66	PopRock	138	4/4	39	17
67	Rhumba	100	4/4	23	7
68	Beguine	110	4/4	39	15

No.	Name	BPM	TimeS	CC00	CC32
<b>VARIETY 2</b>					
71	March	125	4/4	20	14
72	Polka	130	4/4	19	11
73	PDoble	122	4/4	40	3
74	Country	130	4/4	16	9
75	Musette	175	3/4	17	25
76	Sl Waltz	90	3/4	18	9
77	Tango	120	4/4	26	8
78	Reggae	140	4/4	8	9

## ACOUSTIC

81	G Slow	93	4/4	6	40
82	G Bossa	144	4/4	22	21
83	G Pop	100	4/4	7	40
84	G FstPop	85	4/4	22	22
85	P Ballad	55	4/4	5	17
86	P Shuffl	180	4/4	15	6
87	P Night	60	4/4	13	11
88	P Jazz	150	4/4	12	19

# Drum Sets

	PC 1 STANDARD	PC 9 ROOM	PC 17 POWER	PC 25 ELECTRON	PC 26 TR-808	PC 33 JAZZ	PC 41 BRUSH	PC 49 ORCHSTRA	PC 57 SPX
27	High Q	<-	<-	<-	<-	<-	<-	Closed Hi-Hat [EXC1]	---
28	Slap	<-	<-	<-	<-	<-	<-	Pedal Hi-Hat [EXC1]	---
29	Scratch Push	<-	<-	<-	<-	<-	<-	Open Hi-Hat [EXC1]	---
30	Scratch Pull	<-	<-	<-	<-	<-	<-	Ride Cymbal	---
31	Sticks	<-	<-	<-	<-	<-	<-	<-	---
32	Square Click	<-	<-	<-	<-	<-	<-	<-	---
33	Metronome Click	<-	<-	<-	<-	<-	<-	<-	---
34	Metronome Bell	<-	<-	<-	<-	<-	<-	<-	---
35	Kick Drum 2	<-	<-	<-	<-	<-	<-	Concert BD 2	---
36	Kick Drum 1	<-	MONDO Kick	Elec BD	808 Bass Drum	<-	<-	Concert BD 1	---
37	Side Stick	<-	<-	<-	808 Rim Shot	<-	<-	<-	---
38	Snare Drum 1	<-	Gated SD 1	Elec SD	808 Snare Drum	<-	Brush Tap	Concert SD	---
39	Hand Clap	<-	<-	<-	<-	<-	Brush Slap	Castanets	High Q
40	Snare Drum 2	<-	<-	Gated SD	<-	<-	Brush Swirl	Concert SD	Slap
41	Low Tom 2*	Room Low Tom 2	Room Low Tom 2	Elec Low Tom 2	808 Low Tom 2	<-	<-	Concert SD	Scratch Push
42	Closed Hi-Hat [EXC1]	<-	<-	<-	808 Closed Hi-Hat [EXC1]	<-	<-	Timpani F#	Sticks
43	Low Tom 1	Room Low Tom 1	Room Low Tom 1	Elec Low Tom 1	808 Low Tom 1	<-	<-	Timpani G	Square Click
44	Pedal Hi-Hat [EXC1]	<-	<-	<-	808 Closed Hi-Hat2 [EXC1]	<-	<-	Timpani A#	Metronome Click
45	Mid Tom 2	Room Mid Tom 2	Room Mid Tom 2	Elec Mid Tom 2	808 Mid Tom 2	<-	<-	Timpani A	Metronome Bell
46	Open Hi-Hat [EXC1]	<-	<-	<-	808 Open Hi-Hat [EXC1]	<-	<-	Timpani A#	Guitar Sliding Finger
47	Mid Tom 1	Room Mid Tom 1	Room Mid Tom 1	Elec Mid Tom 1	808 Mid Tom 1	<-	<-	Timpani B	Guitar Sliding Finger
48	High Tom 2	Room High Tom 2	Room High Tom 2	Elec High Tom 2	808 High Tom 2	<-	<-	Timpani c	Guitar cutting noise (down)
49	Crash Cymbal 1	<-	<-	<-	808 Cymbal	<-	<-	Timpani c#	Guitar cutting noise (up)
50	High Tom 1	Room High Tom 1	Room High Tom 1	Elec High Tom 1	808 High Tom 1	<-	<-	Timpani d	String Slap of double bass
51	Ride Cymbal 1	<-	<-	<-	<-	<-	<-	Timpani d#	Key Click
52	Chinese Cymbal	<-	<-	Reverse Cymbal	<-	<-	<-	Timpani e	Laughing
53	Ride Bell	<-	<-	<-	<-	<-	<-	Timpani f	Screaming
54	Tambourine	<-	<-	<-	<-	<-	<-	<-	Punch
55	Splash Cymbal	<-	<-	<-	<-	<-	<-	<-	Heart Beat
56	Cowbell	<-	<-	<-	808 Cowbell	<-	<-	<-	Footsteps 1
57	Crash Cymbal 2	<-	<-	<-	<-	<-	<-	Concert Cymbal 2	Footsteps 2
58	Vibra-slap	<-	<-	<-	<-	<-	<-	<-	Applause
59	Ride Cymbal 2	<-	<-	<-	<-	<-	<-	Concert Cymbal 1	Door Creaking
60	High Bongo	<-	<-	<-	<-	<-	<-	<-	Door
61	Low Bongo	<-	<-	<-	<-	<-	<-	<-	Scratch
62	Mute High Conga	<-	<-	<-	808 High Conga	<-	<-	<-	Wind Chimes
63	Open High Conga	<-	<-	<-	808 Mid Conga	<-	<-	<-	Car Engine
64	Low Conga	<-	<-	<-	808 Low Conga	<-	<-	<-	Car Stop
65	High Timbale	<-	<-	<-	<-	<-	<-	<-	Car Passing
66	Low Timbale	<-	<-	<-	<-	<-	<-	<-	Car Crash
67	High Agogo	<-	<-	<-	<-	<-	<-	<-	Siren
68	Low Agogo	<-	<-	<-	<-	<-	<-	<-	Train
69	Cabasa	<-	<-	<-	<-	<-	<-	<-	Jetplane
70	Maracas	<-	<-	<-	808 Maracas	<-	<-	<-	Helicopter
71	Short High Whistle [EXC2]	<-	<-	<-	<-	<-	<-	<-	Starship
72	Long Low Whistle [EXC2]	<-	<-	<-	<-	<-	<-	<-	Gun Shot
73	Short Guiro [EXC3]	<-	<-	<-	<-	<-	<-	<-	Machine Gun
74	Long Guiro [EXC3]	<-	<-	<-	<-	<-	<-	<-	Laser Gun
75	Claves	<-	<-	<-	808 Claves	<-	<-	<-	Explosion
76	High Wood Block	<-	<-	<-	<-	<-	<-	<-	Dog
77	Low Wood Block	<-	<-	<-	<-	<-	<-	<-	Horse Gallop
78	Mute Cuica [EXC4]	<-	<-	<-	<-	<-	<-	<-	Birds
79	Open Cuica [EXC4]	<-	<-	<-	<-	<-	<-	<-	Rain
80	Mute Triangle [EXC5]	<-	<-	<-	<-	<-	<-	<-	Thunder
81	Open Triangle [EXC5]	<-	<-	<-	<-	<-	<-	<-	Wind
82	Shaker	<-	<-	<-	<-	<-	<-	<-	Seashore
83	Jingle Bell	<-	<-	<-	<-	<-	<-	<-	Stream
84	Bell Tree	<-	<-	<-	<-	<-	<-	<-	Bubble
85	Castanets	<-	<-	<-	<-	<-	<-	<-	---
86	Mute Surdo [EXC6]	<-	<-	<-	<-	<-	<-	<-	---
87	Open Surdo [EXC6]	<-	<-	<-	<-	<-	<-	<-	---
88	---	---	---	---	---	---	---	Applause	---

PC: Program change number (Drum Set Number)  
 <-: Same as the percussion sound of "STANDARD" (PC1)  
 -: No sound  
 [EXC]: Percussion sounds of the same EXC number cannot be played simultaneously.