

## Loading update style into G-70 internal memory

(For Operating System(s): WindowsXP/WindowsME/Windows2000/Windows98SE)

We recommend making a backup to avoid damaging your data, in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the G-70 rear panel) is set to the "OFF" position (unlocked position).

1. Connect the G-70's USB port to your computer.
2. If a floppy disk is inserted in the drive, remove it before proceeding.
3. Press [MENU] > [USB DATA STORAGE] > [INTERNAL MEMORY]. As soon as the connection has been established, the G-70's display shows "CONNECTED"
4. On your computer, open the "My Computer" window. There should be a "Removable Disk" entry that refers to the G-70's internal memory.
5. Download from [www.rolandkeyboardclub.com](http://www.rolandkeyboardclub.com) the file "G-70 Wahoo Groove.zip" and unzip it in your computer.
6. Drag & drop the folder "ROMStyle" to the "Removable Disk" icon (i.e. the G-70's internal memory) whose window you opened above.  
A warning appears that the target area already contains folder of the specified name, tell Windows to replace everything.
7. When the folder is been copied, terminate the USB connection using the tray icon at the right of your computer's tool bar. The tray icon related to the USB connection looks like a green arrow on top of an electronic device. Leave the mouse pointer on this icon and wait for the "Safely remove hardware" message to appear.
8. Using the left mouse button, double-click this icon to open a window that lists all hardware devices that are currently connected. Select "USB mass storage device" and check at the bottom whether the device description refers to your G-70 ("G-70 mass storage device").
9. Click "Disconnect," and in the next window "OK." Wait until a message informs you that you can disconnect the hardware.
10. Click "OK" to close this window.
11. Disconnect the G-70's USB port from your computer

## Loading update style into G-70 internal memory

(For Operating System(s): MacOSX/MacOS)

We recommend making a backup to avoid damaging your data, in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the G-70 rear panel) is set to the "OFF" position (unlocked position).

1. Connect the G-70's USB port to your computer.
2. If a floppy disk is inserted in the drive, remove it before proceeding.
3. Press [MENU] > [USB DATA STORAGE] > [INTERNAL MEMORY]. As soon as the connection has been established, the G-70's display shows "CONNECTED"
4. Download from [www.rolandkeyboardclub.com](http://www.rolandkeyboardclub.com) the file "G-70 Wahoo Groove.zip" and unzip it in your computer.
5. Open the "ROMStyle" folder, select the file Wahoo Groove.stl and drag & drop the selected file into the "ROMStyle" folder of "G70\_SSD" to copy it to the G-70. Confirm to replace the contents of the G-70's "ROMStyle" folder.
6. Drag the "G-70\_SSD" icon to the recycle bin (or use the equivalent shortcut).  
Wait until the icon has disappeared from your desktop.
7. On the G-70, press the [EXIT] button or [DISCONNECT] field.
8. Disconnect the G-70's USB port from your computer

Copyright © 2006 Roland Europe SpA

All rights reserved

You are allowed for free personal use without any warranty of any kind. Copy, redistribution and modification, including uploading in any internet site are forbidden.