

E-50/E-60 Version 1.11 Updating Instructions

To update the E-50/E-60 you need a PCMCIA Adapter and a memory card with at least 6 Mbyte free space.

UPDATING THE OPERATING SYSTEM (WINDOWS)

For Operating System(s): Windows Vista / WindowsXP / WindowsME / Windows2000 / Windows98SE

WARNING: The complete Update operation takes about 8 minutes. Though your user data are preserved during the update, we recommend that you make a backup to avoid damaging your data in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the E-50/E-60 rear panel) is set to the "OFF" position (unlocked position).

We also recommend saving your personal User Program Set before updating, as follows:

- Press [DISK & MEDIA] > [SAVE] > [USER PROGRAM SET]
- Name your Set
- Select [INTERNAL MEMORY] and press [EXECUTE]

Prepare the memory card to accept data

1. Insert the memory card into the PCMCIA Adapter.
2. Insert the PCMCIA with memory card into the E-50/E-60 PCMCIA slot and switch on the E-50/E-60.
3. If your memory card has already been initialised using an E-50/E-60 you can go directly to step 5.
4. Press [DISK & MEDIA] > [FORMAT] > [EXTERNAL MEMORY]]> [YES] and wait for the format operation to complete.

Loading update data into memory card

5. Connect the E-50/E-60's to your computer using the USB port.
6. If a floppy disk is inserted in the drive, remove it before proceeding.
7. Press [MENU] > [USB DATA STORAGE] > [EXTERNAL MEMORY]. As soon as the connection has been established, the E-50/E-60's display shows "CONNECTED"
8. On your computer, open the "My Computer" window. Locate the memory card which will show as a "Removable Disk" ("E50_CARD/E60_CARD" icon).
9. Download from www.rolandkeyboardclub.com the file "E-50 OS version 1.11.zip" for the E-50 or the file "E-60 OS version 1.11.zip" for the E-60 and unzip it in your computer.
10. Copy the ".sys" file (the update file) to the "Update" folder of your memory card.
11. When the file has been copied, terminate the USB connection using the tray icon at the right of your computer's tool bar. The tray icon related to the USB connection looks like a green arrow on top of an electronic device (usb socket with green symbol for Window Vista).

Leave the mouse pointer on this icon and wait for the "Safely remove hardware" message to appear.

12. Using the left mouse button, double-click this icon to open a window that lists all hardware devices that are currently connected. Select "USB mass storage device" and check at the bottom whether the description refers to your memory card ("E50_CARD/E60_CARD").

13. Click "Disconnect," and in the next window "OK." Wait until a message informs you that you can disconnect the hardware.

14. Click "OK" to close this window.

Update your E-50/E-60 with Version 1.11

15. Hold down the [DISK&MEDIA] button to the lower left of the display while switching on the E-50/E-60.

Keep holding that button until the "SYSTEM UPDATE" message appears.

15. Press the 8 BEAT / 16 BEAT button in the E-50/E-60 STYLE section. The E-50/E-60 starts loading the 1.11 software version. When all data have been loaded, the "Power Off and Power On again" message appears.

Switch off the E-50/E-60, wait a moment, then switch it on again.

19. Note: Before proceeding with step 19 make sure you have saved your personal User Program Set before updating, as follows:

- Press [DISK & MEDIA] > [SAVE] > [USER PROGRAM SET]
- Name your Set
- Select [INTERNAL MEMORY] and press [EXECUTE]

Press [MENU] > [UTILITY] > [FACTORY RESET], and [EXECUTE] to initialize E-50/E-60.

Press the [EXIT] button to return to the main page.

UPDATING THE OPERATING SYSTEM (MACINTOSH)

For Operating System(s): MacOSX / MacOS

WARNING: The complete Update operation takes about 8 minutes. Though your user data will be preserved during the update, we recommend that you make a backup to avoid damaging your data in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the E-50/E-60 rear panel) is set to the "OFF" position (unlocked position).

We also recommend saving your personal User Program Set before updating, as follows:

- Press [DISK & MEDIA] > [SAVE] > [USER PROGRAM SET]
- Name your Set
- Select [INTERNAL MEMORY] and press [EXECUTE]

Prepare the memory card to accept data

1. Insert the memory card into the PCMCIA Adapter.

2. Insert the PCMCIA with memory card into the E-50/E-60 PCMCIA slot and switch on the E-50/E-60.
3. If your memory card has already been initialised using the E-50/E-60 you can go directly to step 5.
4. Press [DISK & MEDIA] > [FORMAT] > [EXTERNAL MEMORY]]> [YES] and wait for the the format operation to complete.

Loading update data into memory card

5. Connect the E-50/E-60's USB port to your computer.
6. If a floppy disk is inserted in the drive, remove it before proceeding.
7. Press [MENU] > [USB DATA STORAGE] > [EXTERNAL MEMORY]. As soon as the connection has been established, the E-50/E-60's display shows "CONNECTED"
8. Switch to your computer desktop. It should contain a "E50_CARD/E-60_CARD" icon that refers to your memory card.
9. Double-click the "E50_CARD/E60_CARD" icon.
10. Download from www.rolandkeyboardclub.com the file "E-50 OS version 1.11.zip" for the E-50 or the file "E-60 OS version 1.11.zip" for the E-60 and unzip it in your computer.
10. Copy the ".sys" file (the update file) to the "Update" folder of your memory card.
11. When the file is been copied, Drag the "E50_CARD/E60_CARD" icon to the Trash (or use the equivalent shortcut). Wait until the icon has disappeared from your desktop.

Update your E-50/E-60 with Version 1.11

12. Hold down the [DISK&MEDIA] button to the lower left of the display while switching on the E-50/E-60. Keep holding that button until the "SYSTEM UPDATE" message appears.
13. Press the 8 BEAT / 16 BEAT button in the E-50/E-60 STYLE section. The E-50/E-60 starts loading the 1.11 software version. When all data has been loaded, the "Power Off and Power On again" message appears.

Switch off the E-50/E-60, wait a moment, then switch it on again.

14. Note: Before proceeding with step 14 make sure you have saved your personal User Program Set before updating, as follows:

- Press [DISK & MEDIA] > [SAVE] > [USER PROGRAM SET]
- Name your Set
- Select [INTERNAL MEMORY] and press [EXECUTE]

Press [MENU] > [UTILITY] > [FACTORY RESET], and [EXECUTE] to initialise E-50/E-60.
Press the [EXIT] button to return to the main page.

All rights reserved

You are allowed for free personal use without any warranty of any kind. Copy, redistribution and modification, including uploading in any internet site are forbidden.